

# Assembly Instructions

# Thank you for purchasing a Birlea product

For a chance to win a Love2Shop voucher simply post a picture of your new product on your preferred social channels tagging Birlea Furniture. One winner will be selected at random each month.

## Are you happy with your purchase?

Yes: That's great, we would love to hear more from you. Please leave us a review on our Trustpilot link on the QR code here. Your feedback will be greatly appreciated.



No: If for any reason there is something missing, indifferent or incorrect with your order, please contact the retailer that you purchased your item from.

The products takes 1 hours 15 minutes to build along with 1 man builds.



Vendor: \$000350

### ASSEMBLY INSTRUCTIONS STOCKWELL 1 DRAWER BEDSIDE RUSTIC OAK EFFECT

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE OR USE STOCKWELL 1 DRAWER BEDSIDE RUSTIC.

#### PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

#### ASSEMBLY:

Assembly should be carried out with this item laying flat, not standing upright.

Assemble on a soft, clean surface to prevent damages.

To erase the numbers printed on the pieces, use the rubber inside the accessories pack.

#### HEALTH & SAFETY:

DO NOT use this product if any parts are missing, damaged or worn.

DO NOT use this product unless all folings are secured.

Always use on a level, even ourface.

#### CARE & MAINTENANCE:

Periodically check all screws & fixings to ensure they are secure.

DO NOT push this product as this will cause demage.

Always lift this product with two people to reposition.

Keep any sharp objects away from this product.







www.birlea.com

Page 1of6

Vendor: 9000350

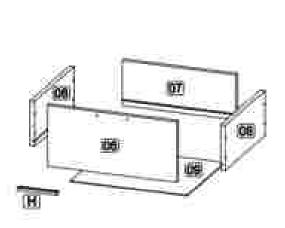

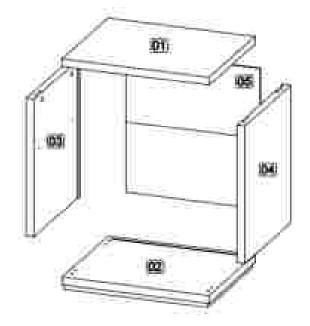

Parts List				Hardware List			
Part	Descripton	m Qty Part Description			City		
01	Top panel	1	A1	Cam lock	8	4	
02	Bottom panel	1	A2	Minifix screw	G32-1	4	
03	Side panel ( Left )	1	A3	Plastic cap	Q	4	
04	Side panel (Right)	1	B	M8 x 30mm Wood Dowel		8	
05	Back panel	1	C	M6 x 60mm CSK Cap Wood screw	0	4	
60	Drawer front	70	D	Allen key M4	~	3	
07	Drawer back	1	E	M3.5 x 16mm C.B Screw		12	
08	Drawer side	2	F	M4 x 25mm C,B Screw	-	2	
09	Drawer bottom	1	G	M4 x 38mm C.B Screw		6	
" You will need a small mallet and a			н	PVC Handle 7050.96	~	1	
A A STANSFER CONTRACTOR OF THE PROPERTY OF THE PARTY OF T				A STATE OF THE PARTY OF THE PAR	The same		

acrewdriver for assembly.

" Some screws and wooden down! may remain.

Ш	*	M3.6 x 16mm C.B Screw		12
	F	M4 x 25mm C,B Screw	-	2
	G	M4 x 38mm C,B Screw		6
	н	PVC Handle 7050.96	~	1
	11	14" Drawer slide (Left / Right)	De com	2
	12	14" Drawer alide (Left / Right)		2
	31	Stud 192	40	8
	32	Stud 192 screw		8
Ш	K	5/6 PVC Nail Leg	67	4
111				




Vendor, 9000350 Step 1: Prepare these parts for assembly using hardware parts A1, A2, B, D, E, F, H, I1 and K. DO NOT use any power tools as this may damage the frame and will invalidate any claim. 01 Africa 03 04 02 **Birlea** 

Vendor, 9000350

Step 2: Attach side panel (3) and (4) to top panel (1) using hardware A1 and A2 with a screwdriver (not provided). DO NOT use any power tools as this may damage the frame and will invalidate any claim.




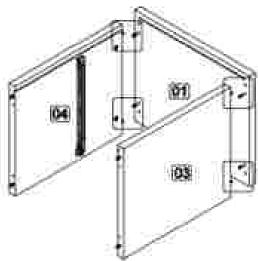




Step 3: insert back panel (5) along the slot.


DO NOT use any power tools as this may damage the frame and will invalidate any claim.

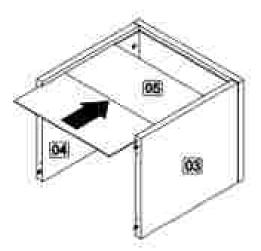

Step 4: Attach bottom panel (2) to side panel (3) and (4) using hardware C and D.

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

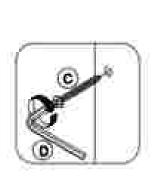

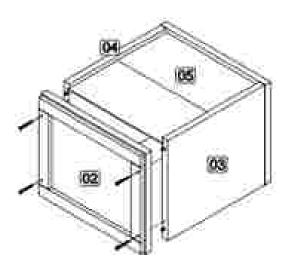




Birlea.


Page 4 of 6

Vendor: 8000350

Step 5: Attach hardware J1 into top panel (1), bottom panel (2), side panel (3) and (4) using hardware J2 with a screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

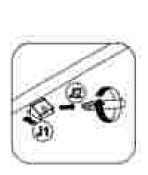


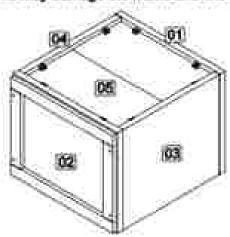



Step 6: Assemble the drawer components using hardware E, G and I2.

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

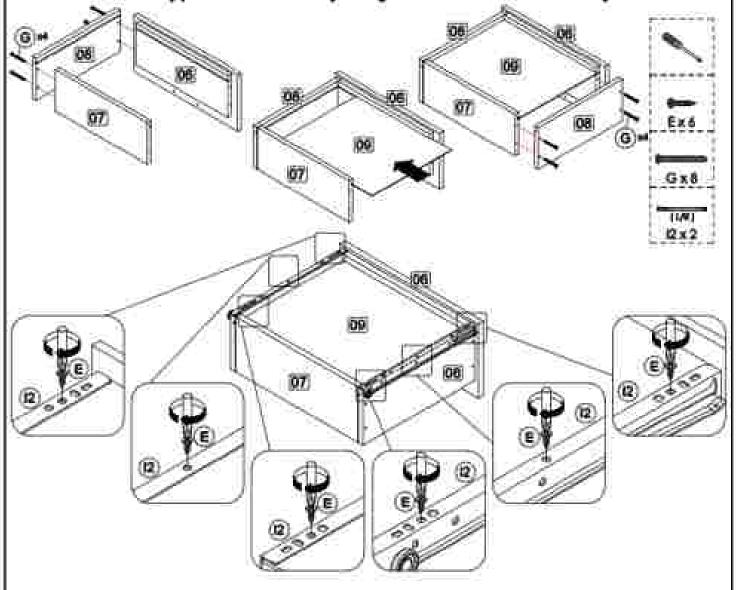


Birlea.


Page 5 of 6

Vendor: \$000350

Step 7: Assemble the drawer in place along the drawer slides.

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

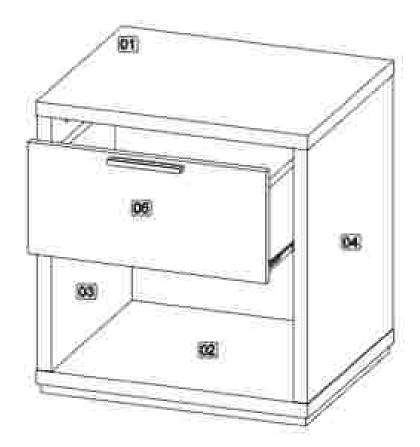

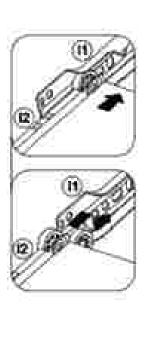

### Additional Information:

- For complete product information, images and dimension diagrams please visit the website www.birlea.com
- If you have any issues with your item please contact the retailer directly you purchased it from who will be able to resolve any issues with Birles.
- Why don't you send us photos of your assembled furniture to info@birlea.com to be shared in our #birleahome feature on instagram.



Page 6 of 6