

Birlea®

Assembly Instructions

**Thank you for
purchasing a
Birlea product**

For a chance to win a Love2Shop voucher simply post a picture of your new product on your preferred social channels tagging Birlea Furniture. One winner will be selected at random each month.

Terms & conditions here

Are you happy with your purchase?

Yes: That's great, we would love to hear more from you. Please leave us a review on our Trustpilot link on the QR code here. Your feedback will be greatly appreciated.



No: If for any reason there is something missing, indifferent or incorrect with your order, please contact the retailer that you purchased your item from.

Please note that this items build time is around 30 minutes with 1 man build



www.birlea.com

ASSEMBLY INSTRUCTIONS NOAH 1 DRAWER BEDSIDE

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING OR USING YOUR NOAH 1 DRAWER BEDSIDE.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

HEALTH & SAFETY:

DO NOT use this item if any parts are missing, damaged or worn.

DO NOT use this item unless all fixings are secured.

Please keep small parts out of reach of children.

Always use on a level, even surface.

CARE & MAINTENANCE:

Assemble in the room of use.

Assembly should be carried out with this item laying flat, not standing upright.

Assemble on a soft, clean surface to prevent damages.



To remove the printed numbers on the pieces, use the eraser provided.


Periodically check all screws & fixings to ensure they are secure.

DO NOT push the item as this will damage the base.

Always lift the item with two people to reposition.

Keep any sharp objects away from the item.

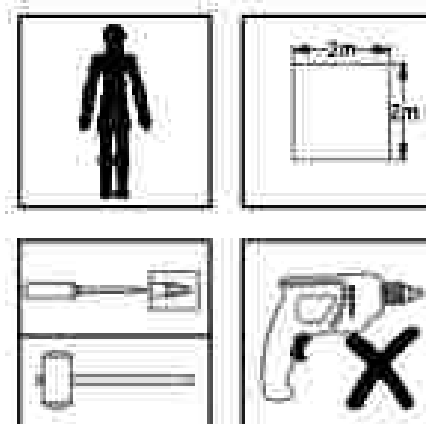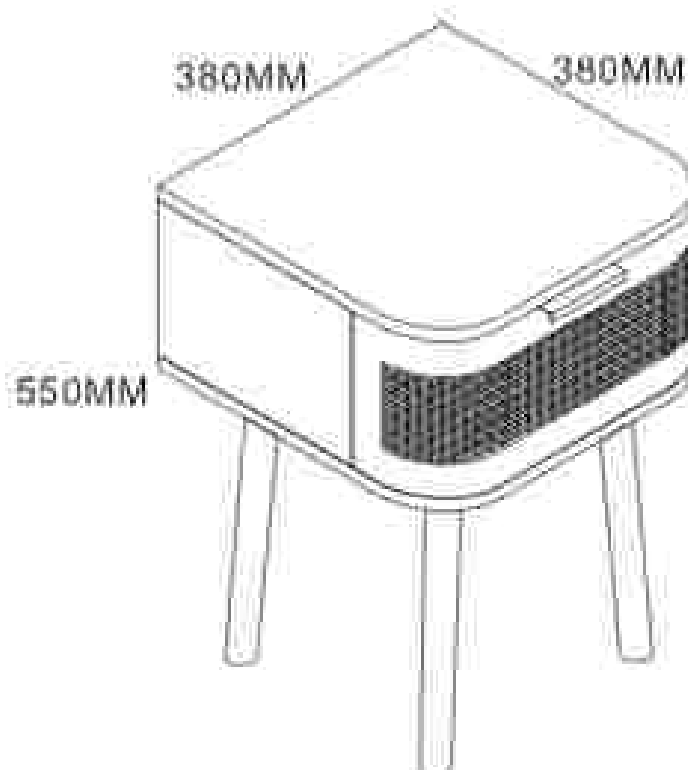


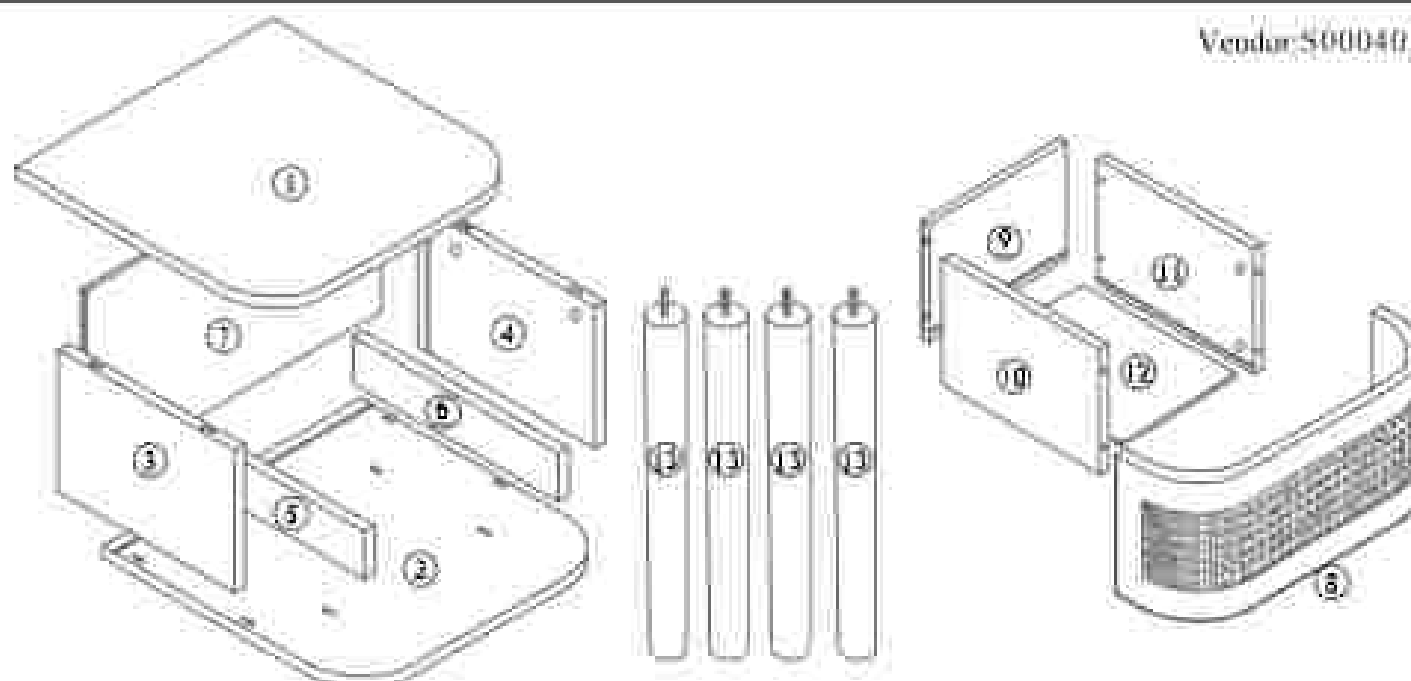

Parts list				Parts list			
Part	Description	Box	Qty	Part	Description		Qty
1	Cabinet Top	1	1	A	Cam Bolt M6X35MM		8
2	Bottom Panel	1	1	B	Cam Lock 15X10MM		8
3	Left Side Panel	1	1	C	Wooden Dowel M6X30MM		12
4	Right Side Panel	1	1	D	Screw M4X35MM		14
5	Left Slide Support Panel	1	1	E	Screw M3X14MM		4
6	Right Slide Support Panel	1	1	F	Screw M3.5X14MM		2
7	Back Panel	1	1	G	Plastic Corner Support		4
8	Drawer Front Panel	1	1	H	Handle		1
9	Drawer Back Panel	1	1	I	Blue Side METAL RUNNER 17" (RD)		1
10	Drawer Left Side Panel	1	1		Blue Side METAL RUNNER 17" (L)		
11	Drawer Right Side Panel	1	1		Blue Side METAL RUNNER 17" (SL)		
12	Drawer Bottom Panel	1	1		Blue Side METAL RUNNER 17" (DR)		
13	Feet	4	4	J	Nylon Anti Tip Strap		2
				K	Wall Plug		2
				L	Metal Leg Plate		4
				M	Screw M4X12MM		22
				N	Screw M3X12MM		12

** You will need a small mallet and a screwdriver for assembly.




** Some screws and wooden dowel may remain.

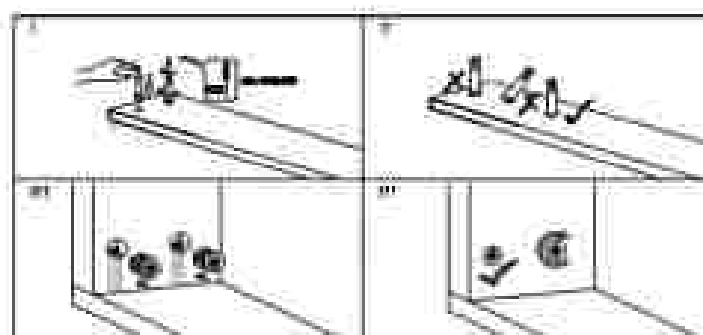

Step 1




Vendor: S000405

AX4
CX8

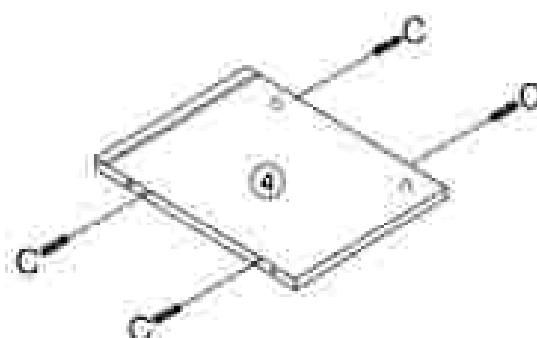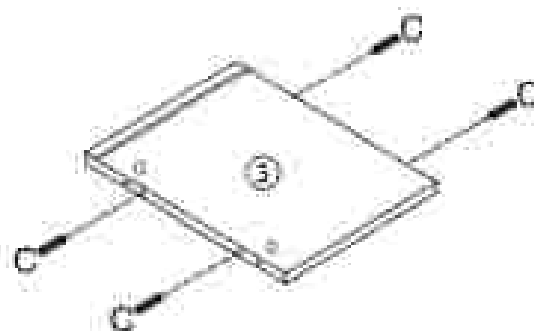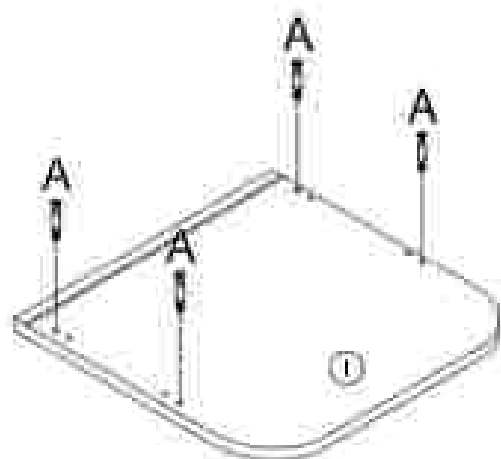







Step 2

B X 4

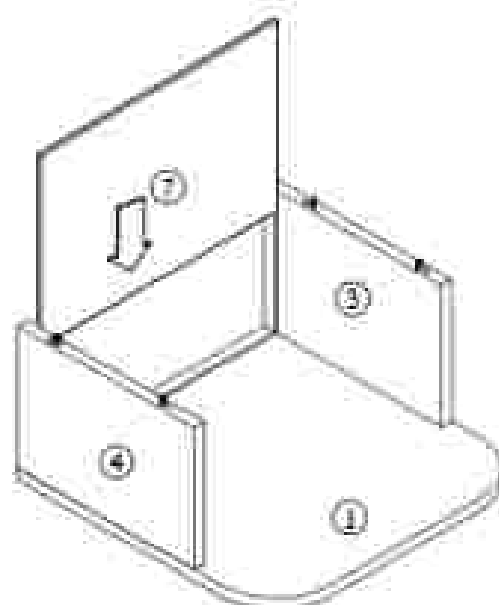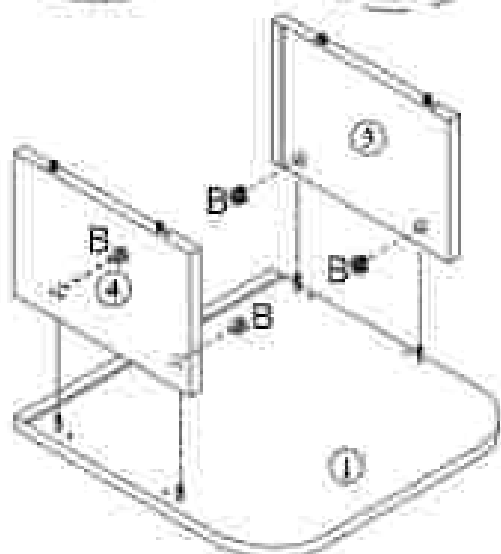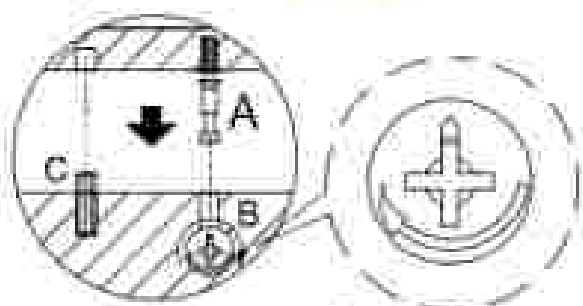

Step 3



Vendor: S000403

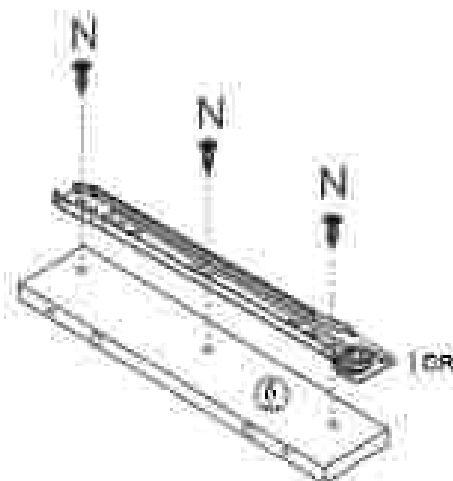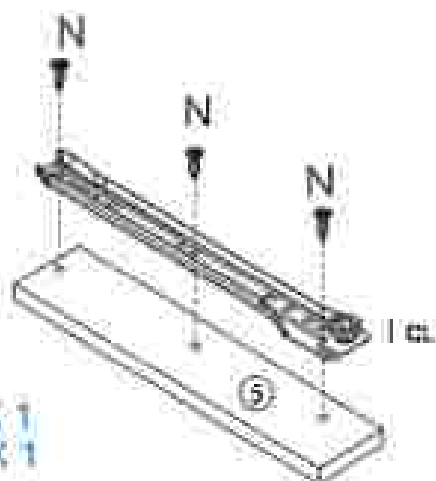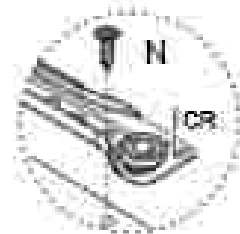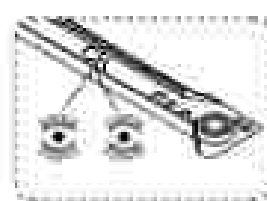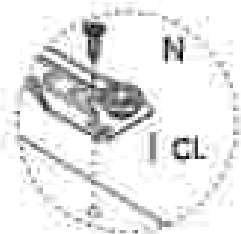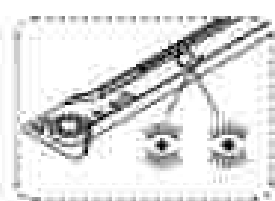

I (CL) X 1
I (CR) X 1
N X 3

Step 4




C X 4
D X 8

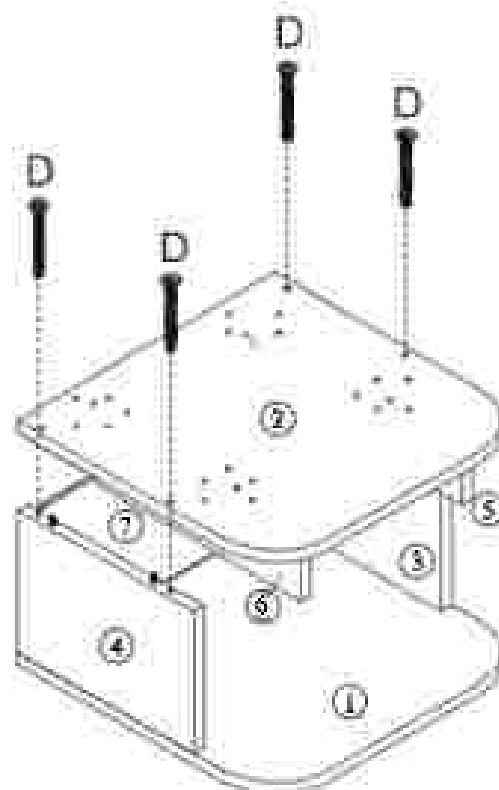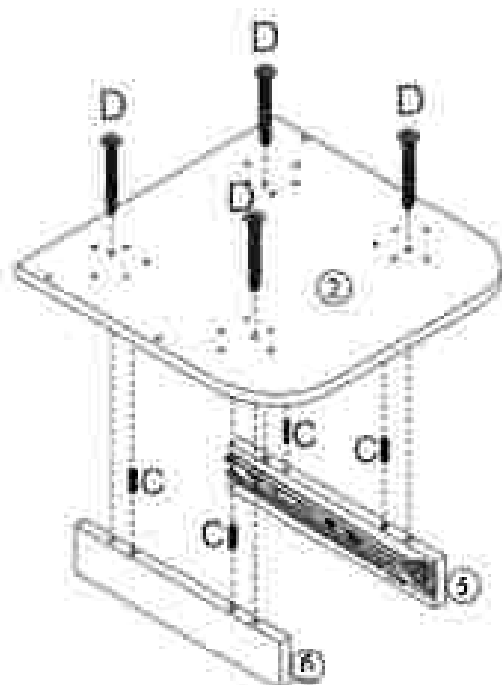

Step 5




Vendor: S000403

L X 4
M X 20

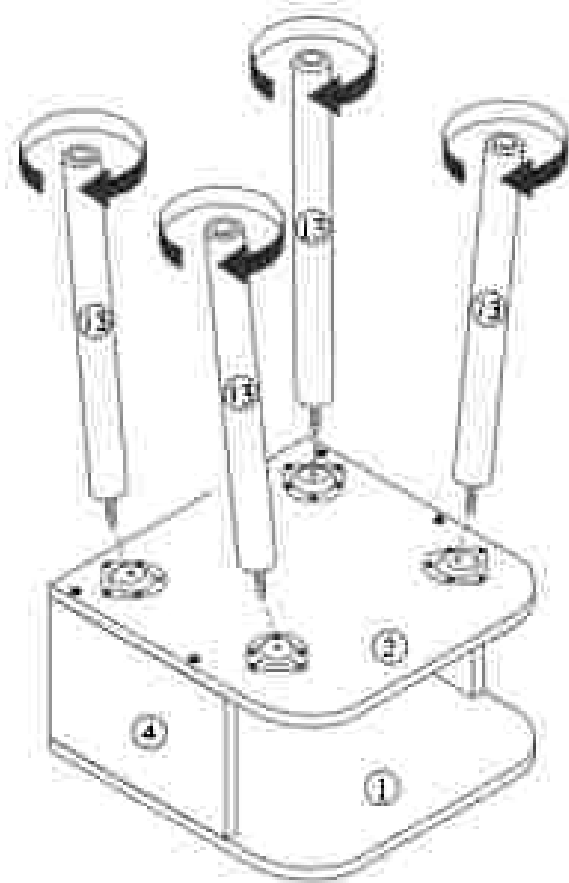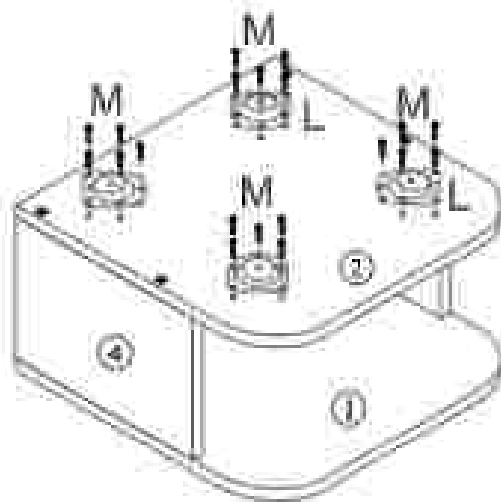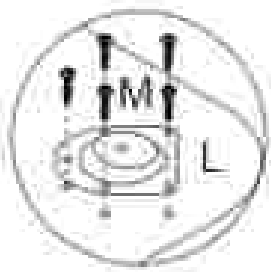

Step 6


A X 4
D X 4

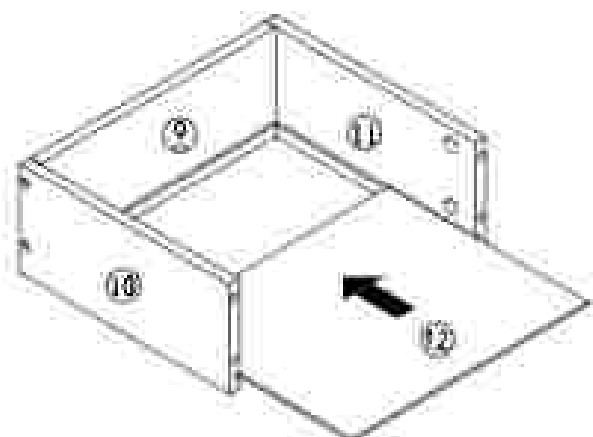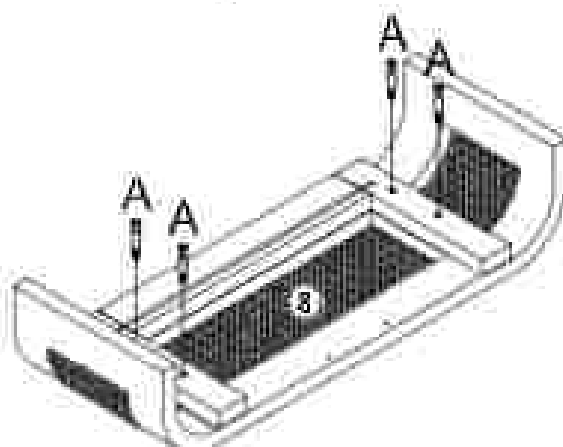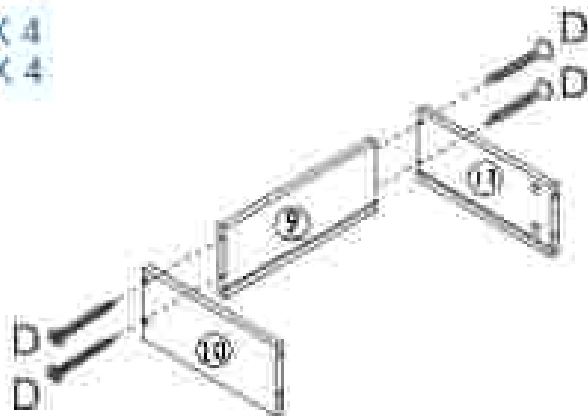

Step 7





Vendor: S000405

B X 4
F X 2
H X 1

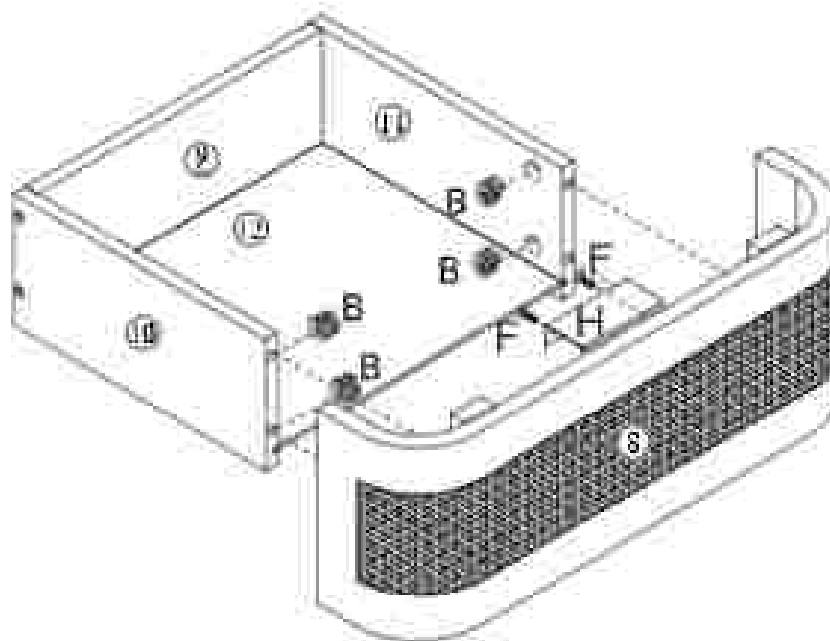




Step 8

I(DR) X 1
I(DL) X 1
N X 6

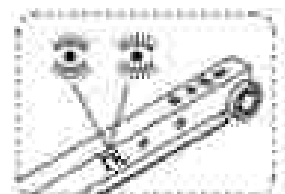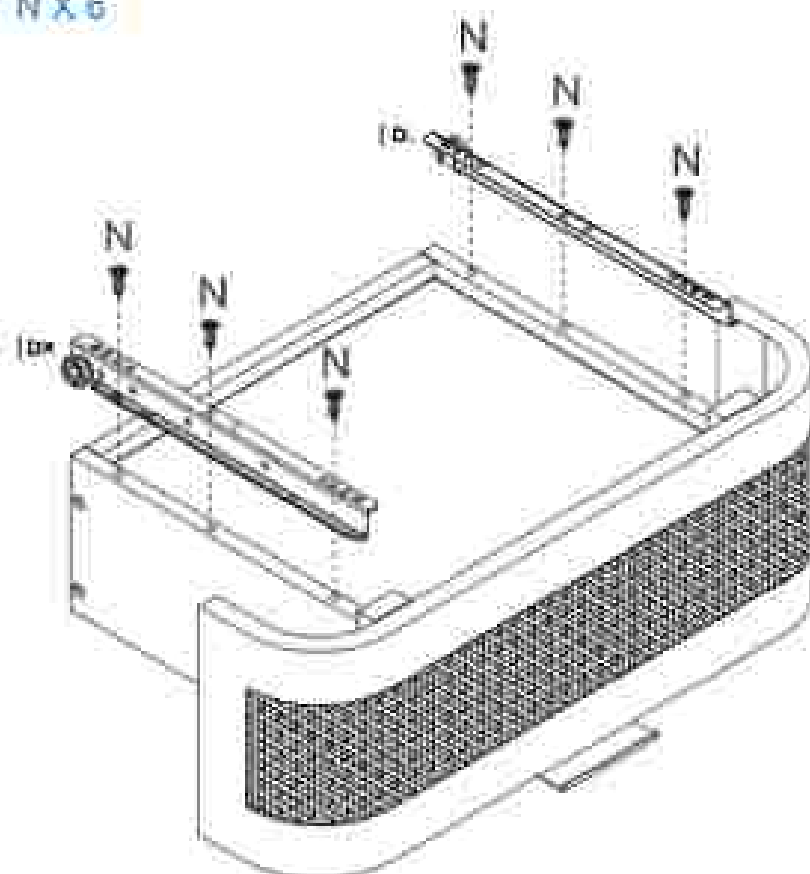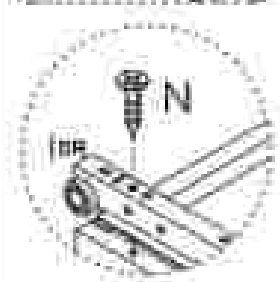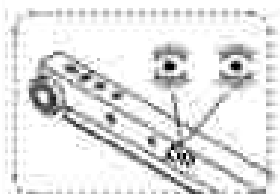





Step 9

Vendor: S000405

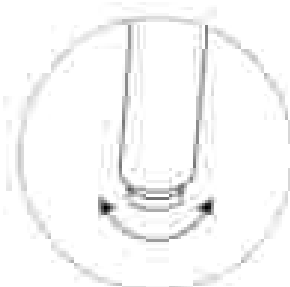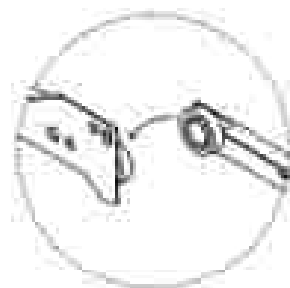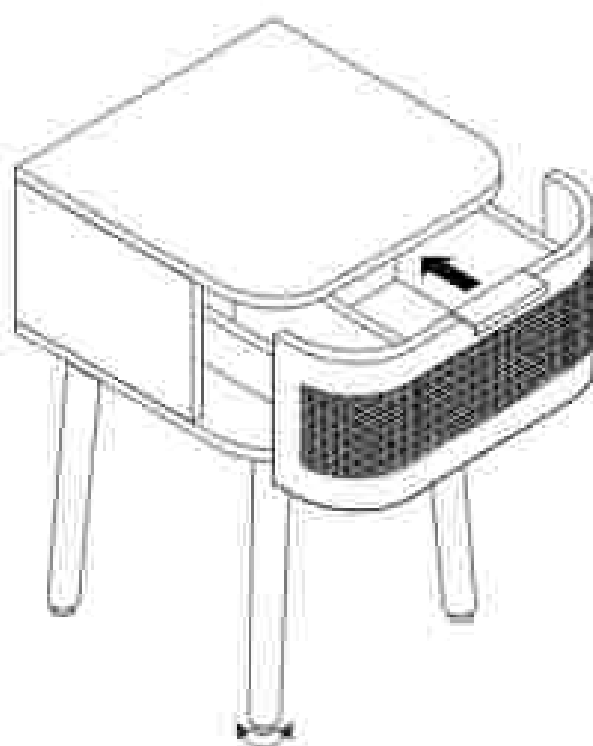

Step 10


EX4
GX4

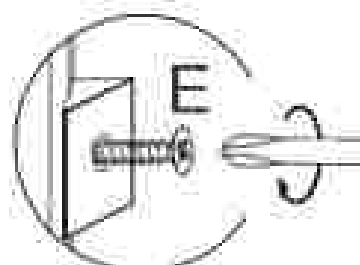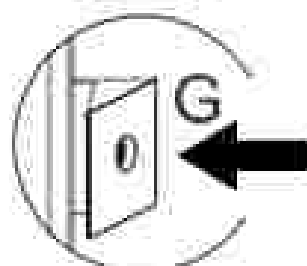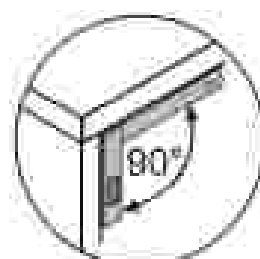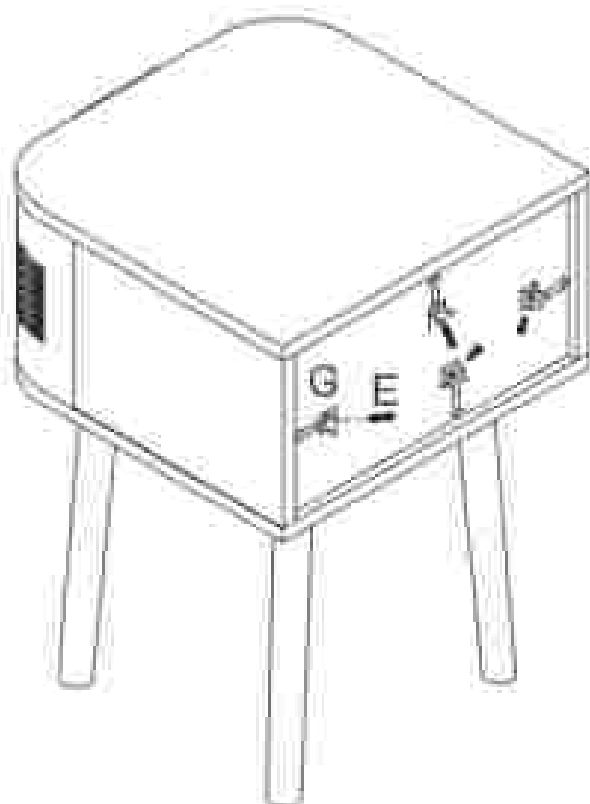

Step 11

Vendor: S000405

J X 2
M X 2

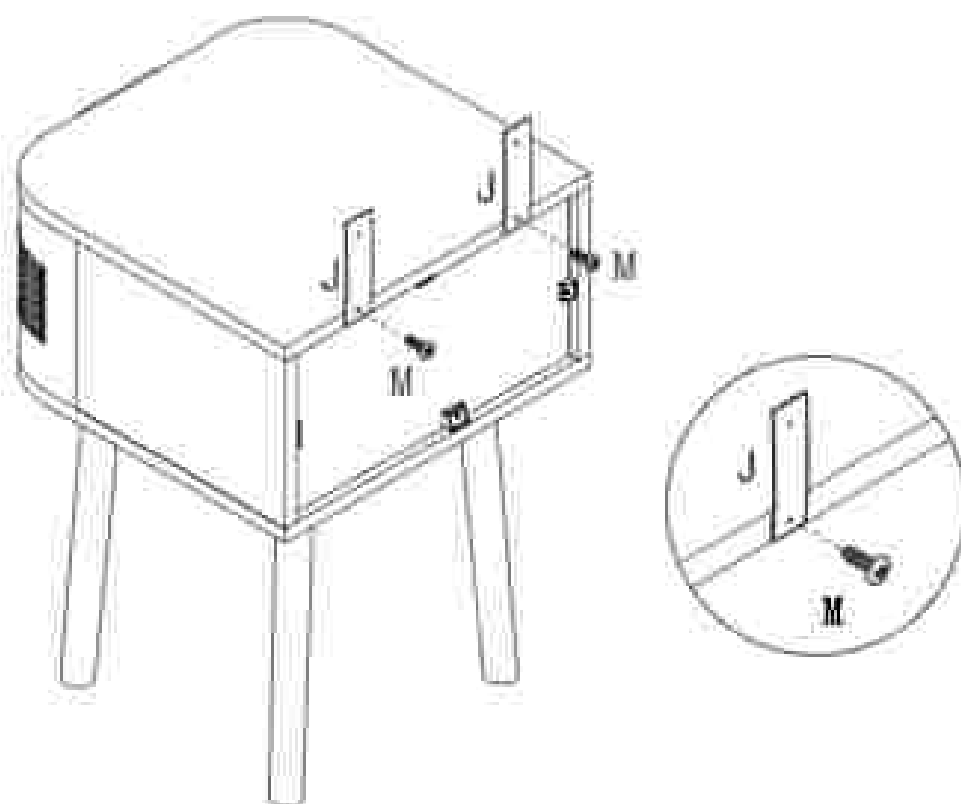

Step 12

D X 2
K X 2

